

**Must do before install the cartridges at the first time use :**

 
ONLY INSTALL THE CHIP BOXES , DO NOT FIT THE CARTRIDGES , THEN CLEAN THE PRINT HEAD FOR 1- 2 TIME ,

The way is on the end of paper

How to reset the chips (only for refillable model)

1. The cartridges are used auto reset chips(ARC), it can auto reset the chips more than million times.
2. You can mix these cartridge to use with the original ink cartridges or the other compatible ink cartridges
3. The chips are designed for their own colors, you can not swap them to use with each other in any color cartridges.

For EPN printer **Fill full inks for 1 time. can reset the chips for 2-3 times**



The ink will be showed less and less when printing, as the same as original cartridges. The chips of refillable cartridge can auto reset when the printer show '0' capacity ink. If after using for a long time ,the computer tells you to replace cartridge and the printer doesn't work, **Power off the printer for 1 minute, then restart ok.**

**For some latest model printers. keep the power on. remove and reinstall the cartridges for 1 time**

 
How to fill inks (only for refillable model)

Open all plugs,




When filling inks  
Open all plugs,  
fill inks at both holes

Open the plug  
that far from the nozzle

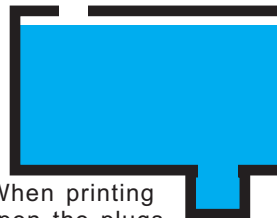

When printing  
Open the plugs  
that far from the nozzle

 When works,

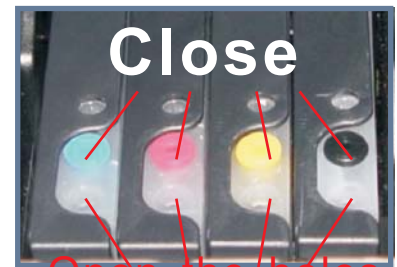

Install the cartridges

Atch the cartridges to the chip boxes, then install into the printer as the original ink cartridges  
If you need to replace the cartridge, please keep the chip boxes (refillable model only), or contact the dealer

Remove short line of printing (only for some printers, don't for all printers)

Any refilling ink way by hand , will bring some air into the inks , and print the image with some short line.  
(CAN NOT SOLVE BY THE WAY OF NORMAL CLEAN PRINT HEAD)



If you find this problem after refill inks, you can do as below :

Step1: SHAKE the cartridges for several times, then install the cartridges into the printers.

Step 2: if step 1 can not solve the problem, please stop printing for 10-30 minutes, then can print ok

**PLEASE DON'T SOLVE THIS PROBLEM BY CLEANING THE PRINT HEAD FOR SOME TIMES (AFTER REFILL)**

Clean print head without cartridges



**Work with chip boxes without cartridges**

Remove the cartridges, only install the chip boxes in the carriage.

Clean the print head for 1- 2 times

You should do this step when as below

1. No use the printer for a long time ( 2 weeks)
2. Change to different brands inks, include the original inks